


CHIMNEY FLASHING PROCEDURE

Flashing a Chimney


STEP 1

Apply asphalt primer to bricks; apply metal base flashing to front, overlapping shingles 4"

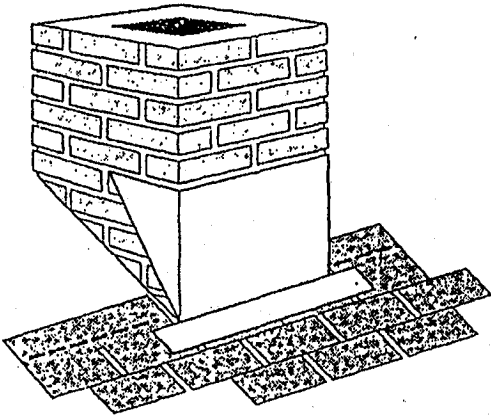


STEP 2

Nail metal step flashing over plastic cement; bed overlapping shingles in plastic cement

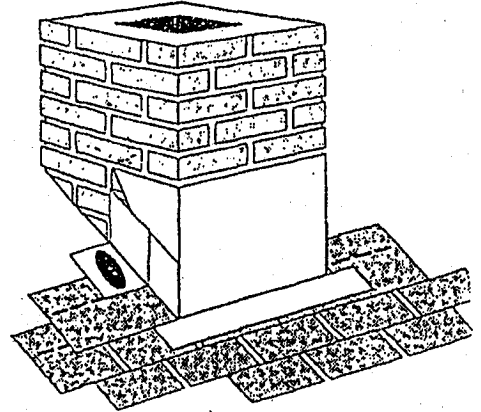


STEP 3

Install wood cricket at rear, and shingle to edge; embed rear corner flashings in cement

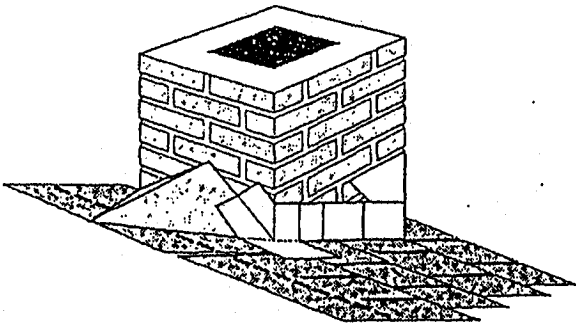


STEP 4

Embed rear base flashing in plastic cement; nail flashing to deck only

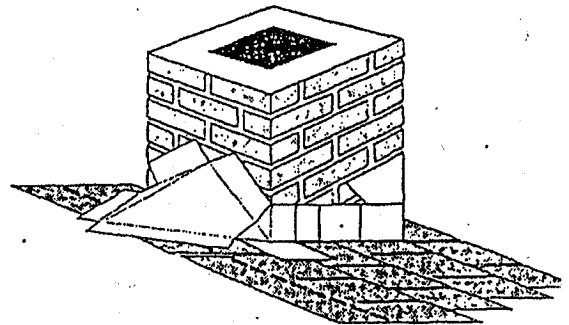

STEP 5

Set front and side cap flashings 1-1/2" into raked joints; refill with mortar

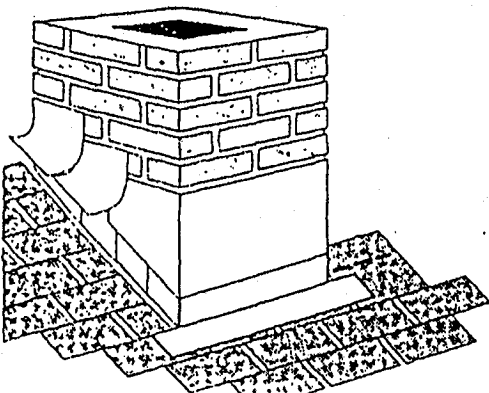

STEP 6

Install rear corner cap flashings; install rear cap flashing suitable to situation

